#### Accessories



50A CT clamp

For dynamic load balancing



100A CT clamp

For dynamic load balancing



Charging cable 7kW/22kW

5m/7.5m, Type 2 to Type 2 Comes with a carry bag



Pedestal with roof

For charging station mounting



Wall bracket

Safe and secure installation on uneven surfaces



Cable hook

Convenient for keeping your charging cable organized



For more information, please scan the QR code or visit us: https://raedian.com/support





For instruction videos, please scan the QR code or visit us: https://raedian.com/support




# RAIDIAN

# Quick Guide NEO

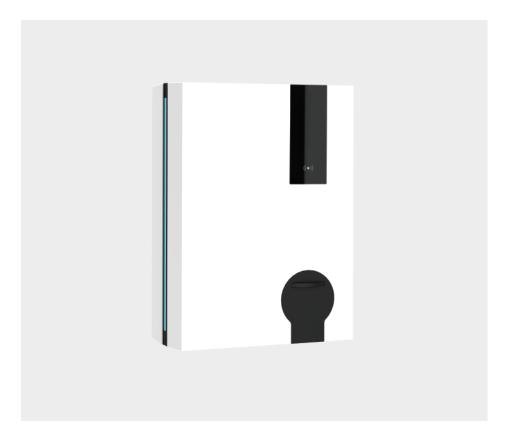

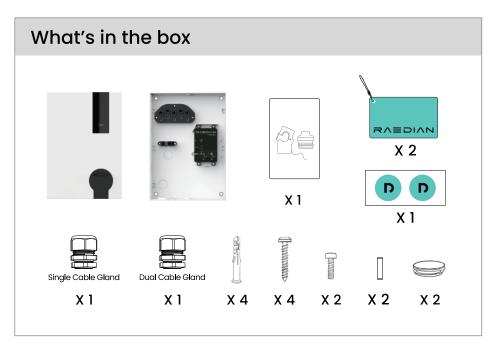

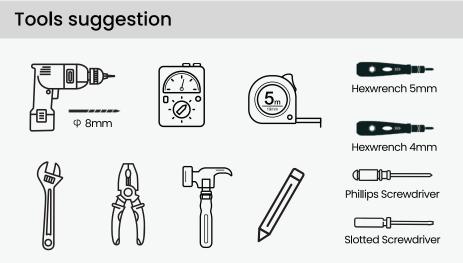


#### Disclaimer


The information in this document is subject to change without notice and should not be construed as a commitment by RAEDIAN. RAEDIAN assumes no responsibility for any errors that may appear in this document.

# 1 Preparing


### 1.1 Position and Power Entry

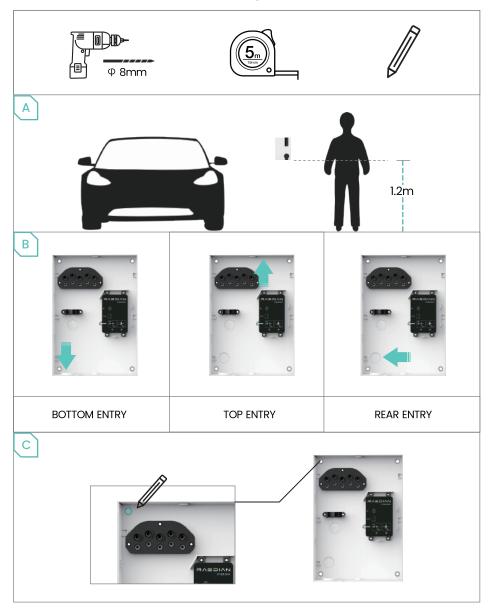

### 1.2 Ethernet Cable Entry (Optional)

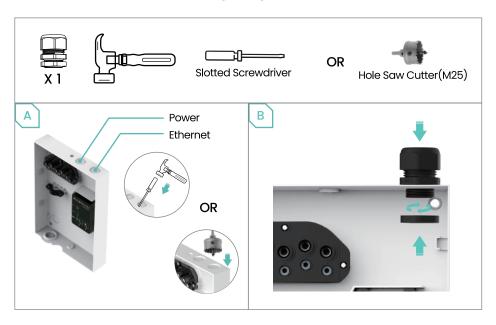



## 2 Mounting

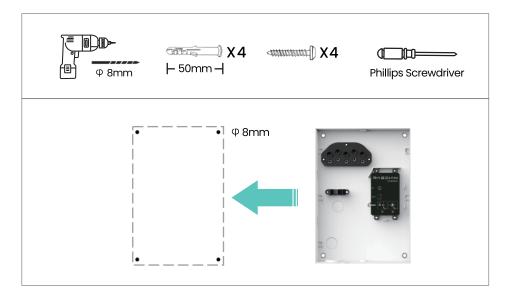

## 3 Wiring

#### 3.1 Power Cable

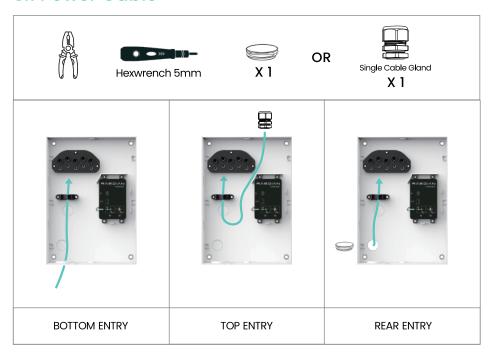

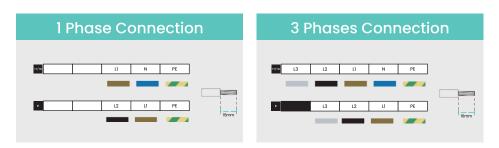




An external at least Type A RCBO according to IEC 61009 or RCCB according to IEC 61008 need to be installed in the upstream. Ensure the installation complies with all applicable laws and regulations.


#### 3.2 Connect Ethernet Cables



#### 3.2.1 Ethernet Cable for Home Balance

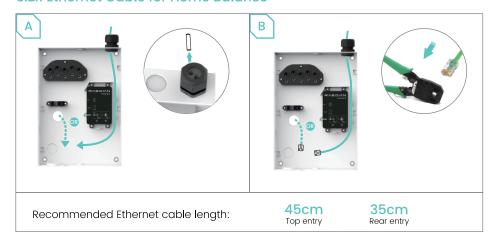


#### 3.2.2 Ethernet Cable for Network Communication (Optional)

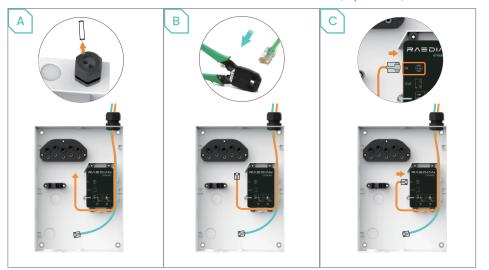


## 4 CT Kit Installation

#### **4.1 CT Clamp Positioning (Home Balance)**

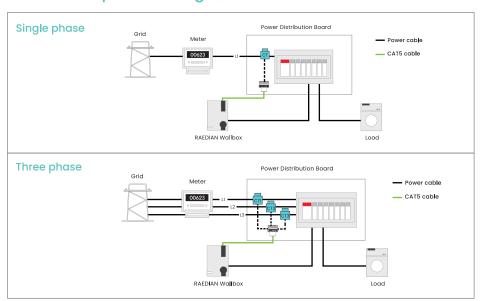


#### 4.2 Install CT Kit

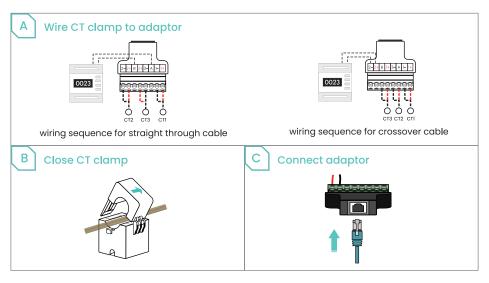


### 5 Installing



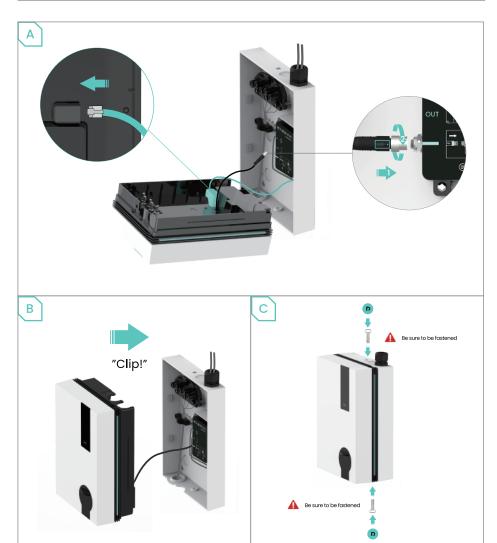



## 6 Get Started


#### **6.1 LED Indicators**

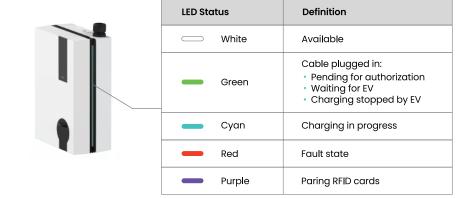

### 6.2 OLED Display

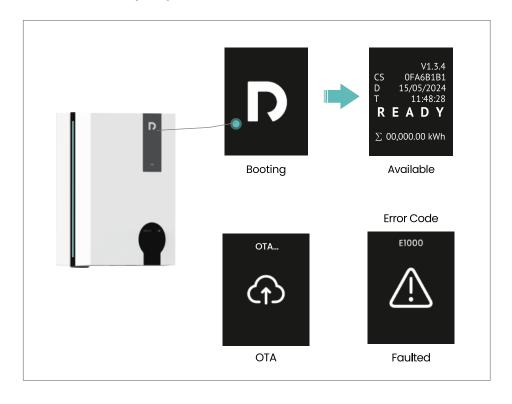

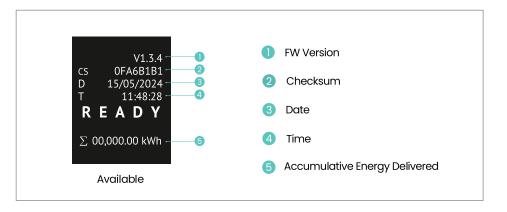


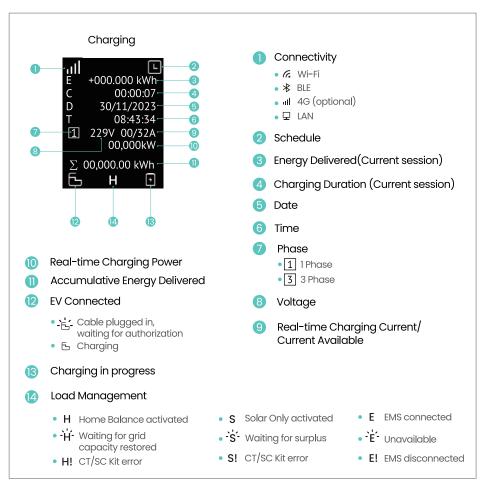

9

# 7 Access

### 7.1 Plug And Charge (Default)

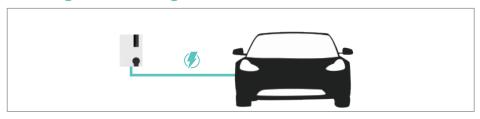

### 7.2 Authorization (Set In APP)

